

TECHNICAL SERVICE BULLETIN

ENGINE DOES NOT CRANK OR BATTERY REPEATEDLY DISCHARGES

Model: Volkswagen, all models and years

Group: Engine Electrical

SERVICE INFORMATION:

An engine that won't crank or a battery that is repeatedly discharged while driving may be caused by poor wiring connections that result from a loose fastening nut on terminal 30 of the starter motor.

To repair this condition:

- Disconnect battery ground terminal
- Clean and inspect connections at terminal 30 of starter. Repair burned/damaged connections as necessary. Torque fastening nut to 10 N.m (7.5 ft-LB).
- Reconnect battery ground terminal